

contigo®



 
AUTOSPOUT® Kids' Bottle Care and Use Instructions

CAUTION


- Not for use with hot, carbonated, pulpy or perishable beverages.
- Not intended for children under 3 years of age.
- Do not microwave or freeze.
- Do not use cleaners containing bleach, chlorine, abrasives and/or other harsh chemicals.
- DO NOT overfill. Fill liquids to just below the threading in the body.
- DO NOT continue to use if damaged.

CLEANING INSTRUCTIONS



- Wash thoroughly before first use.
- RINSE LID IMMEDIATELY AFTER EACH USE with warm water and spout in the open position.
- Remove straw for best results.

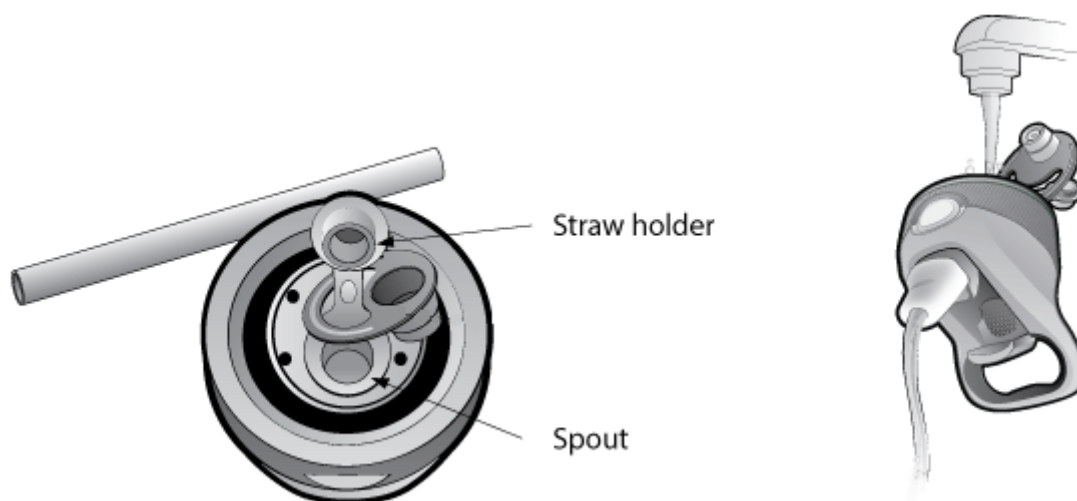

 - Then wash lid in top rack of dishwasher, or soak lid for 10 minutes in hot, soapy tap water.
- Rinse thoroughly.
- Bodies are top-rack dishwasher safe and can also be hand washed with warm water and a mild detergent and then rinsed thoroughly.

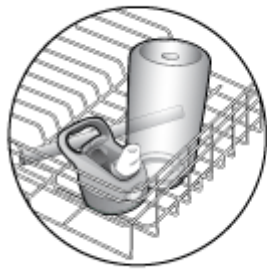

OR

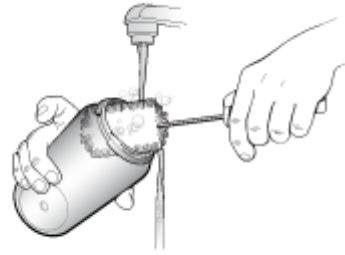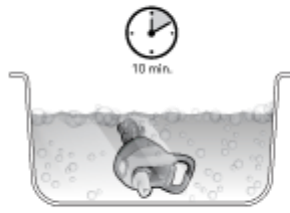  

- ALWAYS STORE PRODUCT WITH LID REMOVED and spout in open position to allow parts to dry completely.

TO OPEN



TO CLOSE



- Do not pull or rotate the spout shield as it may cause damage to the lid.
- Silicone drink spout is not removable.